

MIDIcreator

Information Sheet

Sensor: MIDIblock **Reference No:** G00040

Specification:

- Switched sensor
 - Strike with drumstick
- Electrical
 - Nominal current: 1.00mA
- Physical
 - Cable length: 2 metres
 - Wooden block
 - Size: 208 x 30 x 18mm

A set of these would make a glockenspiel

Use: A single marimba/xylophone style wooden block that connects to a switch socket on MIDIcreator. Just hit it and play a chord or note.

Trouble Shooting: The MIDIblock requires a fairly sharp strike i.e. a drum stick or knuckle and triggers in the opposite direction from other sensors.

Check the following:

- Check the lead is fully plugged in.
- Check both green LEDs on MIDIcreator are on.
- Check MIDI lead and sound module.
- Check red LED on MIDIcreator flickers when sensor is operated.
- Check for possible broken wires.
- Check usage is correct.

Care:

- Sensitive electronic equipment, do not subject to wet or damp conditions.
- Pull plugs out of MIDIcreator by the plug body, not the cable.
- Do not use water, scouring pads or solvents for cleaning sensors.

Safety Tips: There are no electrical or health hazards using any of the sensors but care should be taken with the operating environment:

- Ensure the floor area is clear behind the operator so as not to trip over anything when moving backwards.
- Ensure cables to MIDIcreator are placed so that people cannot trip over them.
- Always turn off the mains wall socket before plugging or unplugging the MIDIcreator power supply.
- Only use the sensors for their correct purpose.