

# MIDIcreator

## Information Sheet

**Sensor:** MIDIsensor **Reference No:** G00064

**Specification:**

- Proportional sensor
  - Non-contact
  - Movement to, from or across sensor
- Electrical
  - Nominal current: 2.40mA
- Physical
  - Cable length: 2 metres
  - Case: ABS plastic
  - Size: 110 x 58 x 22mm

**Use:** Designed to detect the slightest movement, MIDIsensor can be played with a finger, arm, leg, head or even your tongue! It plugs straight into a proportional socket.

**Trouble Shooting:**

- Move the MIDIsensor away from metal desks etc.
- The Rose logo is the sensitive area and should be facing upwards.
- Any sensor may be used with any of the 16 MIDIcreator inputs. A sensor plugged in a switched (top row) socket will only give a switched effect.

Check the following:

- Check the lead is fully plugged in.
- Check both green LEDs on MIDIcreator are on.
- Check MIDI lead and sound module.
- Check red LED on MIDIcreator flickers when sensor is operated.
- Check for possible broken wires.
- Check usage is correct.

**Care:**

- Sensitive electronic equipment, do not subject to wet or damp conditions.
- Pull plugs out of MIDIcreator by the plug body, not the cable.
- Do not use water, scouring pads or solvents for cleaning sensors.

**Safety Tips:** There are no electrical or health hazards using any of the sensors but care should be taken with the operating environment:

- Ensure the floor area is clear behind the operator so as not to trip over anything when moving backwards.
- Ensure cables to MIDIcreator are placed so that people cannot trip over them.
- Always turn off the mains wall socket before plugging or unplugging the MIDIcreator power supply.
- Only use the sensors for their correct purpose.